



Removal


- 1 Unscrew four screws on inside of lid.

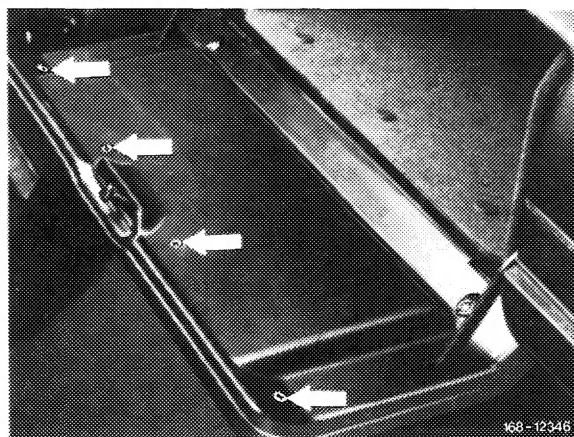

- 2 Remove both slotted nuts, using a standard slotted nut wrench.

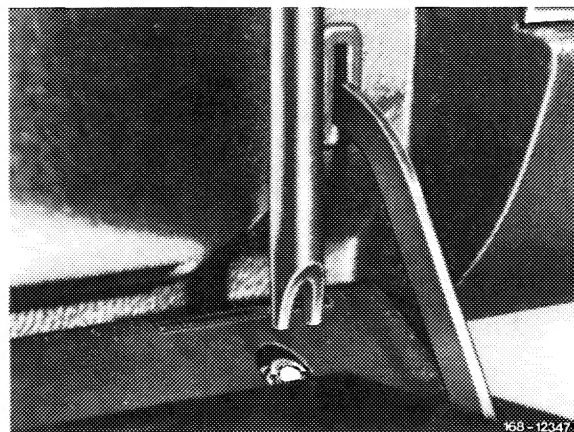


- 3 Position outer side retaining pin upright.

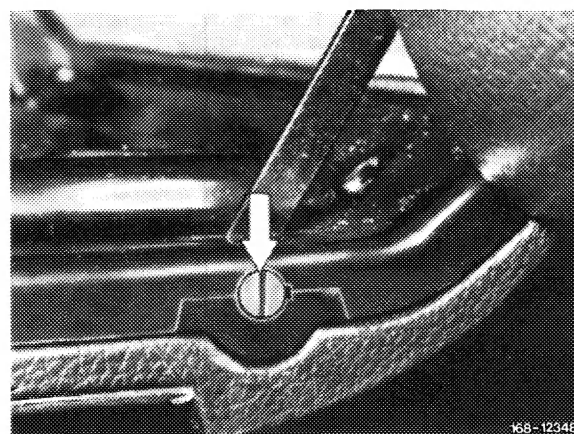


4 Pull side pin out of glove compartment lid.

Note: Since pin has a lock on one side, it could be necessary to turn pin by one half turn to remove.

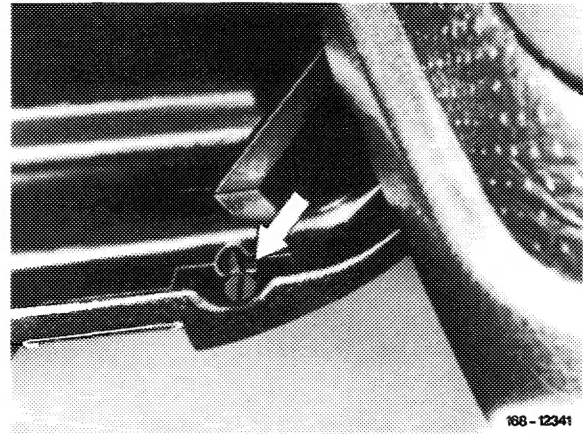


5 Remove outer stop bracket.

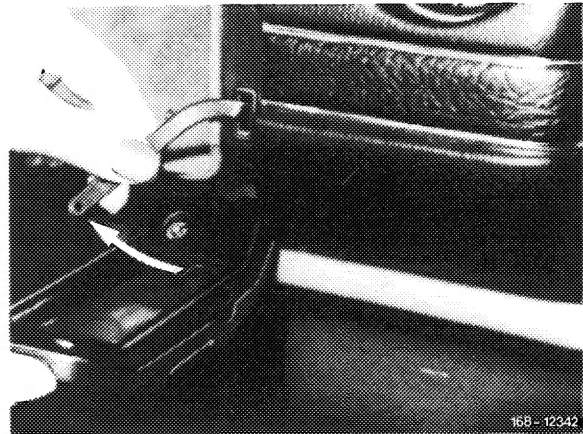

6 Lift inner part of glove compartment lid off of foam rubber part.

7 Run lower part with pins out of hinges.

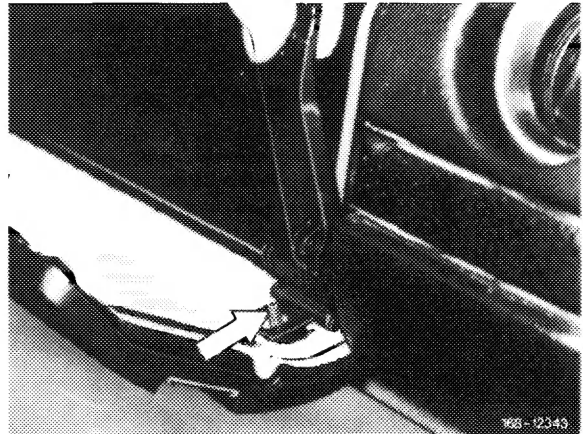

8 Lift inner stop bracket with glove compartment lid upper section out of instrument panel.

Installation

9 Install in reverse sequence.

